


CONTENTS

FLYSHEET	Guy lines attached
INNER TENT	1 Complete inner with 3 bedrooms
GROUNDSHEET	Entrance area
POLE BAG	10 steel poles (3 sections for each pole) and 2 canopy poles
PEG BAG	Steel pegs
REPAIR KIT	Fabric patches, seam sealant, spare toggle and shock cord
GAMES KIT	Chess, Draughts and Snakes & Ladders

Height 235cm

Inner Height 225cm

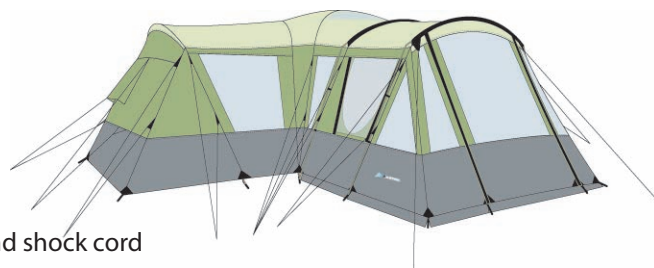

ERECT INNER TENT FIRST

- 1: Remove contents from valise and identify each item.
- 2: Assemble poles, these come in three sections per 1 pole, 2 straight sides and 1 arch over the top. Where these poles fit together, they are in the shape of a trapezium where 1 side is longer than the other 3. Make sure you fit these sections together the correct way.
- 3: Lay inner tent on ground. You will see some orange straps along one side of the tent. These are the tensioner system. They are attached to the Ring & Pin and are adjustable by way of an adjuster buckle. These all need slackening off before you thread any poles. Thread the colour coded poles carefully through corresponding colour-coded sleeve. (The green coded poles are not required at this stage as they are used for the flysheet)
- 4: Once threaded, fit one end of each pole onto the pin at the end of each sleeve (start at the pole end without the orange strap) then lift poles and attach in the same way on other side.
- 5: When all poles are in place tighten the orange tape and peg out starting at one point and working round.
- 6: Spread the flysheet on the ground to identify where the door is positioned before draping it over the inner tent and secure it with the velcro tabs and clips.
- 7: Now push the remaining green poles through the sleeves on the flysheet and place the pins into their respective pole ends. Secure with the flysheet to the pole with the plastic clips. When in place tighten the orange tapes and peg out the flysheet starting at one end and working your way around. N.B. Peg out draught skirt loosely to ensure tension is taken by shock cord loops.
- 8: Guy lines are fitted and if used correctly will provide increased stability in adverse conditions, we therefore advise that the tent be guyed down as well as pegged. Always follow the line of the pole that the guy rope is attached to and peg into the ground in that line.
- 9: An entrance groundsheet is provided and can be pegged in place using the eyelets.
- 10: Metal upright poles are supplied to create a canopy if required.
- 11: After use ensure tents (inner and outer) are clean and dry before packing away. Brushing or gently washing with luke warm water will remove any dirt or stains. Never use detergents as these can affect the waterproofing of the tent. Store in a cool dry place.

CONDENSATION

This is caused by moisture in the atmosphere, respiration and perspiration by the occupants. The moisture in the air comes into contact with the colder fabric and framework and condenses into water droplets. This is not to be confused with the tent leaking. On the contrary the problem is caused by water trying to get out of the tent rather than trying to leak in! Taking the following precautions can reduce condensation.

- 1: Adequate Ventilation
- 2: Do not cook inside the tent
- 3: Where possible avoid storing wet/damp clothing or equipment inside the tent.
- 4: Always take the opportunity to air sleeping bags when the sun is out, as sleeping bags tend to store moisture from the user.

FIRE RETARDANT

This Aztec tent is fire retardant proofed but, does not mean it is safe to cook or use naked flames within your tent.



FALCON 12